



## **Storm Drain Marking Safety Guidelines**

### **Volunteers Dos and Don'ts**

#### **DO'S**

DO wear light colored clothing and/or a hat that will not impair vision or movement and wear closed toe shoes.

DO wear your stylish high-visibility vest and latex gloves (provided by KFCB).

DO furnish adequate adult supervision for groups that include children.

Do work in small groups.

DO complete marking projects only during daylight hours and under good weather conditions.

DO stay alert and be prepared to move out of the way of vehicles.

DO wear sunscreen.

DO have your cell phone.

DO read and follow *Installation Instructions* (see next page and a copy will be provided when you check out your supplies)

#### **DON'TS**

DON'T smoke. (Adhesive is highly flammable.)

DON'T do marking while under the influence of alcohol or drugs.

DON'T park in an area that would obstruct motorists' view of you.

DON'T "horse around" or do anything to purposely distract drivers.

DON'T overexert. Especially in warmer temperatures, bring water and take breaks as needed.

DON'T wear earbuds. (They could prevent you from hearing traffic or other hazards.)

DON'T mess with fire ants, yellow jackets, wasps, etc. Also, be aware of and avoid animals such as snakes, possums, and raccoons.

DON'T remove hazardous substances or dead animals (contact your project leader or KFCB regarding disposal).


DON'T attempt marking if temperature is below 40° (not because we're in GA and we're cold weather wimps!- but because the adhesive will not stick)

**See next page for Installation Instructions**

# INSTALLATION INSTRUCTIONS

## Please Read Before Installation


- Read Cautionary Statement and First Aid Procedures.
- Surfaces to be bonded must be clean, dry, and free of any loose debris.
- If the application surface is painted; all loose paint should be removed. An installation should then be made and tested for adhesion before proceeding further.
- Application surface must be flat. Curb Marker will not conform to uneven or curved surfaces.

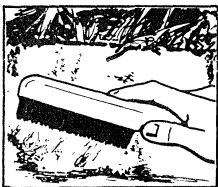

Clean application surface with wire brush. Surface must be clean, dry, and free of any loose debris. *The presence of any foreign material (paint, oil, etc.) may affect adhesion.*



Apply adhesive to the back of the marker as shown. Start 1/8" in from the outside edge applying an even bead around the entire edge and then work to the center.

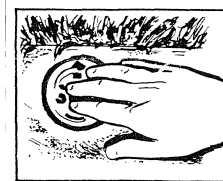

Place the marker on the application surface. Push down HARD with a twisting motion forcing adhesive out from the edge. It is important that the entire edge of the marker is sealed to the application surface.

## Hints for Use

- + It is not necessary to use a large amount.
- + Push down on the marker so that it is "tight" to the surface. Large amounts of adhesive trapped under the surface of the marker can retard cure time.
- + Make sure that the edge has approximately 1/8" of adhesive all around to seal edge to the surface.
- + Wash hands with hand cleaner then soap and water.

**DANGER:** Extremely flammable. Vapor harmful. Vapors may ignite explosively. Use only in well ventilated area. Keep away from and do not use near heat, sparks, and open flame. Do not smoke. Extinguish or remove from area all sources of ignition during use and until all vapors are gone. Keep container closed when not in use and store at room temperature. Do not swallow or breathe vapor. Can cause respiratory irritation, dizziness, Headache, nausea, unconsciousness..Avoid contact with skin, eyes or clothing. Can cause irritation and burns. **KEEP OUT OF REACH OF CHILDREN.**

**FIRST AID PROCEDURES:** Inhalation: Remove to fresh air, administer oxygen or artificial respiration. Contact physician. Eyes: Flush eyes with water for at least 15 minutes. Skin Contact: Wash with soap and water. Contact physician if irritation persists. Ingestion: Do not induce vomiting. Contact physician immediately.

\*Hazardous Ingredients: Toluene C.A.S. No. 108-88-3